

75% - 82 Keys Hot Swappable Mechanical Keyboard

MODEL	KiiBoom Phantom 81	LAYOUT	81 Keys
SIZE	330 x150 x 35mm	WEIGHT	1430g ± 20g
HOT-SWAP	YES	KEYCAPS	PBT
SYSTEMS	Microsoft Windows, Apple macOS		
CONNECTION	USB-C, Wireless 2.4G, Bluetooth 5.0		

Manufactured in China by KiiBOOM.

KiiBOOM.com

EC REP

OST_EU_20220711000049

eVatmaster Consulting GmbH

Bettinastr.30
60325 Frankfurt am Main, Germany
contact@evatmaster.com

UK REP

OST_UK_20220711000015

EVATOST CONSULTING LTD

Suite 11, First Floor, Moy Road Business
Centre, Taffs Well, Cardiff, Wales, CF15 7QR
contact@evatmaster.com



Windows SHORTCUTS

Toggle the Switch on the back to Windows mode

FN + F1	Screen Brightness -
FN + F2	Screen Brightness +
FN + F3	Task Switching
FN + F4	Explorer
FN + F5	Email
FN + F6	Homepage
FN + F7	Last Song
FN + F8	Play / Pause
FN + F9	Next Song
FN + F10	Mute
FN + F11	VOL -
FN + F12	VOL +

macOS SHORTCUTS

Toggle the Switch on the back to macOS mode

FN + F1	Screen Brightness -
FN + F2	Screen Brightness +
FN + F3	Task Control
FN + F4	Call SIRI
FN + F5	-
FN + F6	-
FN + F7	Last Song
FN + F8	Play / Pause
FN + F9	Next Song
FN + F10	Mute
FN + F11	VOL -
FN + F12	VOL +

GENERAL FUNCTION SHORTCUTS

FN + 1	Bluetooth Device 1	FN + \	Toggle the light mode
FN + 2	Bluetooth Device 2	FN + DEL	Toggle backlight direction
FN + 3	Bluetooth Device 3	FN + ↑	Backlight Brightness -
FN + 4	2.4G	FN + ↓	Backlight Brightness +
FN + 5	USB-C	FN + ←	Backlight Speed -
FN + PgUp	Turn on/off the RGB	FN + →	Backlight Speed +
FN + P	Toggle the Sidelight mode	FN +]	Toggle the backlight color
FN + Z	Sidelight Brightness -	FN + WIN-L	Lock Windows Key
FN + X	Sidelight Brightness +	FN + ←	Check Battery
FN + C	Sidelight Speed -		
FN + V	Sidelight Speed +		
FN + B	Toggle the Sidelight color		

CHANGE RGB EFFECTS

Pressing FN+\ at the same time allows you to switch the RGB effect of your Phantom 81 keyboard

PAIRING BLUETOOTH

FN + 1/2/3 Long Press for 3 seconds to pair Bluetooth device

FN + 1/2/3 Short Press to switch to last paired device

Long press the FN+1/2/3 for 3 seconds, the keyboard will start pairing and the light will flash. If there's no connection, the keyboard will enter into sleep mode.

PAIRING WIRELESS 2.4GHZ

FN + 4 Long Press for 3 seconds to pair Wireless 2.4g

FN + 4 Switch to Wireless Mode

Firstly, turn on the keyboard via the switch on the keyboard's bottom. Then plug the receiver into your device. After being recognized by your device, press and hold FN+4 for 3 seconds you will see the 4 key's backlit flashes. When the LED stays on the green, the pairing is successfully done.

BLUETOOTH & WIRELESS 2.4GHZ SPECIFICATIONS

Operating system should be windows 8 or above to support the Bluetooth function. The device should support Bluetooth 5.0 or a higher version to use Bluetooth 5.0.

KEYBOARD SHORTCUTS

If you switch devices and/or systems, please make sure to toggle independent switch to change the keyboard layout according to the system you used, or some shortcuts/multimedia keys may not work properly.

KEYBOARD WAKE UP/ SLEEP



 
If your keyboard is sleeping press any key to wake it up, it will remember the last device connected.

DO YOU NEED ANY MORE HELP?

For technical assistance, please email to support@kiiboomb.com with your purchase order number and a detailed description of your issue.



1. Keycap Puller
2. Switch Puller
3. Switch Pins

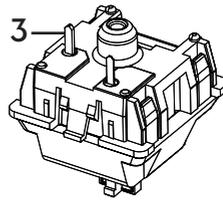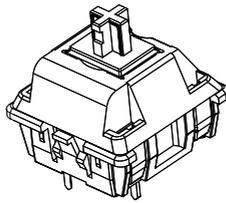

Before installing switches, be sure the pins are clean and straight. Push the Switch Straight Down into the switch slot.
Please be gentle. Be sure the pins are aligned with the slots.

REMOVE SWITCHES

1. Grab your Switch Removal Tool and align the gripping teeth vertically (on the Y-Axis) at the center of the switch, as shown in the example graphic above.
2. Grab the switch with the Switch Puller and apply pressure until the switch releases itself from the plate.
3. Using firm but gentle force pull the switch away from the keyboard using a vertical motion.

INSTALL SWITCHES

1. Check that all the switch metallic pins are perfectly straight and clean.
2. Align the switch vertically to have the Gateron logo facing north. The pins should align themselves to the keyboard PCB.
3. Press the switch down until you hear a click. This means your switch clips have attached themselves to the keyboard plate.
4. Inspect the switch to ensure it's properly attached to your keyboard, and test it.

Note: If the key doesn't work its possible you may have bent one of the switches while installing it. Pull the switch out and repeat the process.

Pins may be damaged beyond repair and need replacement if this process is not done correctly. Never apply excessive force when replacing keycaps or switches. If you cannot remove or install keycaps or switches please contact customer service as soon as possible to avoid damage to the keyboard due to operating errors.

WARRANTY

KiiBOOM's Warranty covers any factory defects that might affect the proper functionality of your purchase. It doesn't cover any damage that may occur from normal wear and tear. If your product is defective we will send you a replacement unit. Replacement units might require you to send the defective unit back to KiiBOOM.

We provide a 1 year warranty for our products when bought from our website (KiiBOOM.com). Your item will not be covered by your 1 year warranty if the inspection shows any sign of modification or changes unsupported by the original product, these include: Changing internal components, Assembling and reassembling the product, Replacing Batteries, etc.

We will ONLY cover the item if it is bought from our official stores. You do not have a warranty with us if you bought the item from another reseller or likewise. Please contact the store that you bought your product from to resolve issues.